

Shanghai Liangxin Electrical Co., Ltd.

NDM2-125 Product Specification

(IPD-ENG-DEV-T20 A1 2016-09-23)

Prepared by	王虎	Date _	2020.07.30
Reviewed by	彭浩然	Date	2020.07.30
Countersigned by	尹宏雨	Date	2020.07.30
Approved by	胡琪	Date	2020,97.30
			2020. 08. 05 文件控制

Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699 Fax: (021)23025796



	Revision History							
Version	Revision Reason/Content	Implementati on Date	Prepared by	Reviewe d by	Approve d by			



Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699

Fax: (021)23025796 Page 20f13



1. Applicable Scope and Purpose of Circuit Breaker

The NDM2-125 molded case circuit breaker (hereinafter referred to as circuit breaker) applies to infrequent switching of circuits with the AC 50/60Hz, the working voltage of AC690V and working current of 125A as well as infrequent motor starting. With the overload, short circuit and undervoltage protection functions, the circuit breaker can protect lines and power equipment from damage.

Document No.: NDT-04489

2. Product Picture of Circuit Breaker (The picture is for reference only; the specific kind prevail)





Picture of the Product

Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Fax: (021)23025796

Post code: 201315 Tel.: (021) 68586699

Page 3of13



3. Specification and Model Description of Circuit Breaker

Document No.: NDT-04489

N-pole (neutral pole) type of the 4P product R: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection	ND	M						
1 Enterprise code 2 Product code 3 Design SN 4 Shell frame level 5 Breaking capacity level 6 Operation mode 7 Number of poles 8 Release code 10 Application code 11 Product 11 Product 11 Product 11 Rated current 11 Product 12 Rated current 13 Cabling type 1 Enterprise code M: Molded case circuit breaker (MCCB) M: Molded case circuit breaker (MCCB) 12 Shell frame level M: Molded case circuit breaker (MCCB) M: Molded case circuit breaker (MCCB) M: Molded case circuit breaker (MCCB) C: Basic type L: Standard type M: Relatively high breaking type M: Relatively high breaking type M: Releasing type M: Relatively high breaking type M: Releasing type M: Re		2						
2 Product code M: Molded case circuit breaker (MCCB) 3 Design SN 2 4 Shell frame level 125 Breaking capacity level	-							
3 Design SN 2 4 Shell frame level 125 Breaking capacity level								
4 Shell frame level Breaking capacity level C: Basic type L: Standard type M: Relatively high breaking type H: High breaking type No code: Direct handle-operated mode P: Motor-operated Z: Rotation handle 7 Number of poles 8 Release code 10 Release (none) 2: Instantaneous tripper only 3: Complex tripper 9 Accessory code 10 Application code N-pole (neutral pole) type of the 4P product N-pole ineutral pole) type of the 4P product 11 Rated current See Table 2 No code: Power distribution type 2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles	-							
C: Basic type L: Standard type M: Relatively high breaking type M: High breaking type M: High breaking type M: Motor-operated mode P: Motor-operated Z: Rotation handle Release code See Table 1 No code: Power distribution type See Table 2 See Table 2 No code: Normal product See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection See Table 2 See Table 3 See Table 4 See Table 5 See Table 5 See Table 6 See Table 6 See Table 7 See Table 8 See Table 9 See								
Breaking capacity level	4		Shell frame level					
M: Relatively high breaking type H: High breaking type								
M: Relatively high breaking type H: High breaking type	5		· ·					
No code: Direct handle-operated mode			capacity level	, , , , , , , , , , , , , , , , , , , ,				
6 Operation mode P: Motor-operated Z: Rotation handle 7 Number of poles 3, 4 0: Release (none) 2: Instantaneous tripper only 3: Complex tripper 9 Accessory code Application code N-pole (neutral pole) type of the 4P product 11 Rated current 12 Rated current 13 Cabling type P: Motor-operated Z: Rotation handle 0: Release (none) 2: Instantaneous tripper only 3: Complex tripper See Table 1 No code: Power distribution type 2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection				H: High breaking type				
Z: Rotation handle				No code: Direct handle-operated mode				
7 Number of poles 3, 4 0: Release (none) 8 Release code 2: Instantaneous tripper only 3: Complex tripper 9 Accessory code See Table 1 10 Application code 2: Power distribution type 2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles 12 Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection 13 Cabling type 7 One Release (none) 2: Instantaneous tripper only 3: Complex tripper only 4: Complex tripper only 5: Complex tripper only 6: Complex tripper only 7: Complex tripper	6		Operation mode	P: Motor-operated				
8 Release code 10 Release (none) 2: Instantaneous tripper only 3: Complex tripper 9 Accessory code 10 Application code N-pole (neutral pole) type of the 4P product 11 Rated current 12 Rated current 13 Cabling type O: Release (none) 2: Instantaneous tripper only 3: Complex tripper See Table 1 No code: Power distribution type 2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection				Z: Rotation handle				
2: Instantaneous tripper only 3: Complex tripper 9	7		Number of poles	3, 4				
3: Complex tripper 9 Accessory code 10 Application code N-pole (neutral pole) type of the 4P product 12 Rated current 13 Cabling type 14 Cabling type 3: Complex tripper 3: Complex tripper See Table 1 No code: Power distribution type 2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection				0: Release (none)				
9 Accessory code 10 Application code 10 Application code 11 No code: Power distribution type 2: Protection motor type 2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles 12 Rated current See Table 2 No code: Normal product P: Connection busbar 21: Rear-plate connection 22H: Plug-in rear-plate connection	8		Release code	2: Instantaneous tripper only				
No code: Power distribution type 2: Protection motor type				3: Complex tripper				
2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection	9		Accessory code	See Table 1				
2: Protection motor type A: The N-pole isn't installed with an overcurrent release, but always connected B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles 12 Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection 13 Cabling type Z2H: Plug-in rear-plate connection	10		Application and	No code: Power distribution type				
N-pole (neutral pole) type of the 4P product R: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection	10		Application code	2: Protection motor type				
N-pole (neutral pole) type of the 4P product B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection				A: The N-pole isn't installed with an overcurrent release, but				
11 pole) type of the 4P product B: The N-pole isn't installed with an overcurrent release, but on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles 12 Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection			N mala (mayanal	always connected				
on-off with the other three poles C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles 12 Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection	11		-	B: The N-pole isn't installed with an overcurrent release, but				
C: The N-pole is installed with an overcurrent tripper, and on-off with the other three poles 12 Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection	11			on-off with the other three poles				
12 Rated current See Table 2 No code: Normal product P: Connection busbar Z1: Rear-plate connection Tabling type Z2H: Plug-in rear-plate connection			4P product					
No code: Normal product P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection				on-off with the other three poles				
P: Connection busbar Z1: Rear-plate connection Z2H: Plug-in rear-plate connection	12		Rated current	See Table 2				
Z1: Rear-plate connection Z2H: Plug-in rear-plate connection				No code: Normal product				
13 Cabling type Z2H: Plug-in rear-plate connection				P: Connection busbar				
				Z1: Rear-plate connection				
720. Plug-in front-plate connection	13	Cabling type		1				
22Q. I lug-in Home-plate confiection				Z2Q: Plug-in front-plate connection				
Z3H: Integrated plug-in rear-plate connection				Z3H: Integrated plug-in rear-plate connection				
Z3Q: Integrated plug-in front-plate connection				Z3Q: Integrated plug-in front-plate connection				
Codes of internal and external accessories:								
Other codes Such as manual operation: CS1-A, xelectric operation: DC1	14		Other codes	Such as manual operation: CS1-A, xelectric operation: DC1				
220V, shunt: AC230V, undervoltage: DC220V				220V, shunt: AC230V, undervoltage: DC220V				

Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699

Fax: (021)23025796 Page 4of13



Table 1: Comparison Table of Accessory Code:



	Installation Model Position Accessory name	NDM:	2-125
Accessory code	Accessory name		4
00	N/A	-	_
10	Shunt release	•	
20	Dual-auxiliary contact	0	
21	Single auxiliary contact		
30	Under-voltage release		0
40	Shunt release, dual-auxiliary contact	•	0
41	Shunt release, single auxiliary contact	•	
50	Shunt release, under-voltage release	•	0
60	Two sets of dual-auxiliary contacts	0	0
61	Two sets of single auxiliary contacts	10	
62	Dual-auxiliary contact, single auxiliary contact	0	
70	Under-voltage release, dual- auxiliary contact	0	0
71	Under-voltage release, single auxiliary contact		0
08	Alarm contact		
18	Shunt release, alarm contact		•
28	Dual-auxiliary contact, alarm contact	<u>D</u>	
38	Under-voltage release, alarm contact		0
48	Shunt release, auxiliary alarm contact		•
58	Auxiliary alarm contact		
68	Dual-auxiliary contact, auxiliary alarm contact		
78	Under-voltage release, auxiliary alarm contact		0



 Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai
 Post code: 201315
 Tel.: (021) 68586699

 Fax: (021)23025796
 Page 5of13



4. Main Technical Parameters of Circuit Breaker

Table 2 Main Technical Parameters of Circuit Breaker

Document No.: NDT-04489

Model		NDM2-125						
Rated current of frame Inm	Rated current of frame Inm (A)				125			
Rated current In (A)	16, 20	0, 25, 32, 4	0, 50, 63	, 80, 100	, 125			
Rated insulation voltage U	i (AC V)			1000				
Rated impulse withstand vo	oltage Uimp (V)			8000				
Rated working voltage Ue	(AC V)	38	0/400/415	, 500, 55	0, 660/69	90		
Power frequency withstand	l voltage U (1min) (V)			3500				
Utilization category			A					
Number of poles	3				4			
Breaking capacity level	С	L	M	Н	/			
	AC380/400/415V	25	36	52.5	85	52.5		
Breaking capacity level C L M I AC380/400/415V 25 36 52.5 8 Rated limit short-circuit breaking capacity Icu AC500V / 25 /	/	/						
(kA)	AC550V	/	20	40	/	/		
	AC660/690V	/	/	20	/	/		
	AC380/400/415V	18.75	27	38	63.75	38		
Rated operating	AC500V	/	25	/	/	/		
short-circuit breaking capacity Ics (kA)	AC550V	/	20	40	/	/		
	AC660/690V	/	/	15 2020. 08. 05	/	/		
Operating performance Electrical life		文件控制 8000						
(times)	Mechanical life			20000				

Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699

Fax: (021)23025796 Page 6of13



4.1 Selection of the circuit breaker connecting bus or cable cross-section area:

Table 3 Selection of the NDM2-125 Connecting Bus or Cable Cross-section Area

Document No.: NDT-04489

				0				
Rated current (A)	16, 20	25	32	40, 50	63	80	100	125
Wire cross-section	2.5	4.0	6.0	10	16	25	35	50
area (mm ³)	2.3	7.0	0.0	10	10	23	33	50

4.2 Tightening Torque of the Circuit Breaker Terminal and Mounting Screw

Table 4 Tightening Torque of the Circuit Breaker Terminal and Mounting Screw

Model	Thread diameter (mm)	Torque (N m)
NDM2-125	M8	12
	M4	2.4

4.3 Derating factor of temperature change for the circuit breaker

Table 5 Derating Factor Table of Temperature Change for the Circuit Breaker

Model		Derating factor of product temperature change						
NDM2-125	Temperature (°C)	40	45	50	55	60	65	70
	Derating factor	1	0.977	0.954	0.931	0.907	0.883	0.858

Note: 1) When the operating ambient temperature is below + 40°C, the product can be used normally without derating capacity.

2) The above derating factors are measured at the frame current.

4.4 High-altitude derating factor of the circuit breaker

Table 6 High-altitude Derating Factor Table of Circuit Breaker

Altitude (km)	Correction factor of the working current	Correction factor of the working voltage	Correction factor of the power frequency withstand voltage
2	In	Ue	U
2.5	In	Ue	U
3	0.98In	0.83Ue	0.89U
3.5	0.97In	0.77Ue	0.85U
4	0.96In	0.71Ue	020. 08. 05 文件控制 0.80U
4.5	0.95In	0.67Ue	0.77U
5	0.94In	0.63Ue	0.73U

Post code: 201315 Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Tel.: (021) 68586699 Fax: (021)23025796



Document No.: NDT-04489

5. Normal Working Environment of Circuit Breaker

- The altitude of the installation site doesn't exceed 2,000m. See the "High-altitude Derating Factor Table of Circuit Breaker" for the derating factor at the altitude;
- The ambient temperature is $-35^{\circ}\text{C} \sim +70^{\circ}\text{C}$; the average within 24 h shall not be more than +35°C. If the ambient temperature is higher than +40°C, the user needs to reduce the capacity. See the "Derating Factor Table of Temperature Change for the Circuit Breaker" for the derating factor;
- 3) Its relative humidity at an ambient temperature of +40°C should not exceed 50%. A higher relative humidity is allowed at a lower temperature. For example, the relative humidity at 20°C can reach 90%; for frost due to temperature change, the corresponding measures should be taken;
- The product can withstand the effects of wet air, salt mist, oil mist and mould;
- The installation category of the circuit breaker connected to the main loop is: Category III (power distribution and control level), The installation category of the circuit breaker not connected to the main loop is: Category II (load level);
- The pollution level is Level 3;
- The product should be installed in places that are free from explosive media, media corrosive to metal, insulation damaging gas, and conductive dust, which should be also avoided from snow and rain;
- 8) In case of stricter user conditions than the above description, negotiate with the manufacturer.




Post code: 201315 Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Tel.: (021) 68586699 Fax: (021)23025796



6. Short-circuit Overload Protection Characteristic Curve of Circuit Breaker

Document No.: NDT-04489

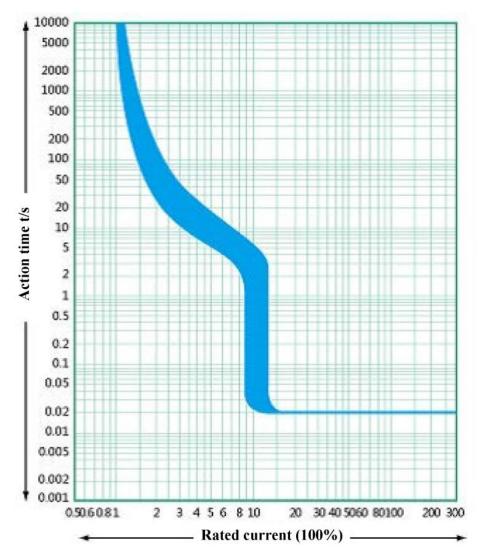

Time/Current Characteristic Curve



Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699


Fax: (021)23025796 Page 9of13



7. Outline, Mounting Hole Dimensions and Safety Distance of Circuit Breaker

Document No.: NDT-04489

7.1 Outline and mounting hole dimensions of circuit breaker

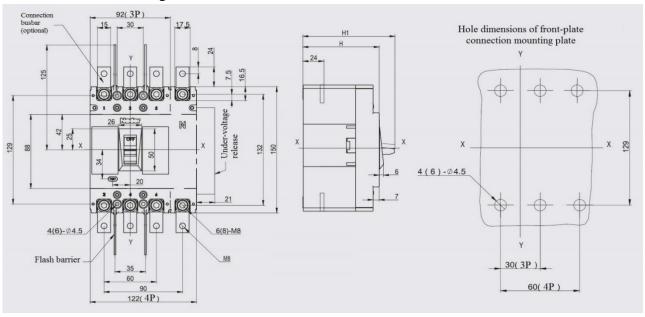


Model	Н	н1	
NDM2-125C、L	69	86	
NDM2-125M、H	87.5	104	
NDM2-125 4P	07.3	104	

Note: The limit deviation not indicated with the tolerance dimensions is as per GB/T 1804-m.

7.2 Safe mounting distance of circuit breaker

Table 7 Insulation Distance Mounted in the Metal Cabinet (Unit: mm)

Mounting distance		ire end to the et face)	B (distance from side	C (outlet wire end to
Model	With a terminal cover	Without a terminal cover	to the cabinet face)	the cabinet face)
NDM2-125	25	65	30	30

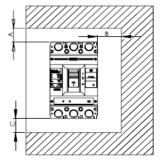



Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699
Fax: (021)23025796 Page 10of13



Table & Minimum	Center Distance between	Rowed Circuit	Breakers (Unit: mm)
Table o Millimum	Center Distance between	i Kowea Ciican	. Dieakeis (Uliit, Illiil)

Document No.: NDT-04489

Model	Width of circuit breaker		I Center distance	
	3 poles	4 poles	3 poles	4 poles
NDM2-125	92	122	122	152

Note: Check the connected busbar or cable during rowing or stacking of the circuit breaker to ensure that the air insulation distance won't be reduced.

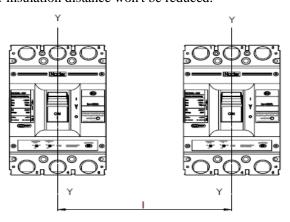



Table 9 Minimum Center Distance between Stacked Circuit Breakers (Unit: mm)

Model	H (distance of circuit breaker from bottom)			
Model	With a terminal cover	Without a terminal cover		
NDM2-125	90	91		

Note: 1) Bare cable connection

- 2) Cable insulating connection
- 3) Connection without insulation

Requirements: Check whether the terminal cover or phase partition is assembled properly before roducts are energized.

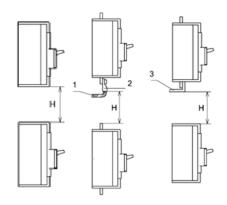



Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Post code: 201315 Tel.: (021) 68586699

Fax: (021)23025796 Page 11of13




8. Installation Direction of Circuit Breaker

For vertical installation of the product, the gradient between the installation surface and the vertical plane is no more than ± 22.5 °.

Document No.: NDT-04489

Horizontal installation of the product.

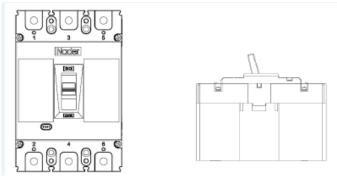

Vertical Installation

Horizontal Installation

9. Packaging and Storage of Circuit Breaker

Minimum packaging quantity: 1 piece/box. The packaged products should be stored in a warehouse with the air ventilation and the relative humidity no more than 80% when the ambient temperature is -40°C~+75 °C. No acidic alkaline or other corrosive gas exists in the ambient air in the warehouse. Under the conditions above, the storage period shall be no more than three years since the manufacturing date.

10. Installation Direction of Circuit Breaker

SN	Name	Specification	3P Quantity/Set	4P Quantity/Set
1	Cross small pan-head screw	M4×45	4	6
2	Hexagon nut	M4	4	6
3	Spring washer	4	4	6
4	Plain washer	4	4	6
5	Phase partition		4 (2020	6
				控制

Post code: 201315 Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Tel.: (021) 68586699 Fax: (021)23025796



11. Circuit Breaker Notes

- 1) Various characteristics and accessories of the circuit breaker are set in the factory. The circuit breaker, tripping unit or other accessories can only be adjusted, installed and maintained by the trained or qualified professionals according to the parameter requirements of the line design;
- 2) Ensure that the power supply is off before installing or removing any device;
- 3) The circuit breaker handle can be located in three positions, indicating three states: on, off and free tripping. When the handle is in the free tripping position, pull the handle in the off direction when the circuit breaker is connected and on.



Record number: LX4.203R-14A

"The storage life is three years"

Post code: 201315 Address: No. 2000, South Shenjiang Road, Pudong New Area, Shanghai Tel.: (021) 68586699 Fax: (021)23025796

Page 13of13