# Shanghai Liangxin Electrical Co., Ltd.

# NDM3-800 Product Specification

(IPD-ENG-DEV-T20 A1 2016-09-23)

Prepared by	王虎	Date	2020.08.04
Reviewed by	彭浩然	Date	2020.08.04
Countersigned by	尹宏雨	Date	2020.08.04
Approved by	胡琪	Date	2020.08.04
			2020. 08. 05 文件控制



	Revision History							
Version	Revision Reason/Content	Implementati on Date	Prepared by	Reviewe d by	Approve d by			



## 1. Applicable Scope and Purpose of Circuit Breaker

The NDM3-800 molded case circuit breaker (hereinafter referred to as circuit breaker) applies to infrequent switching of circuits with the AC 50/60Hz, the working voltage of AC690V and working current of 800A as well as infrequent motor starting. With the overload, short circuit and undervoltage protection functions, the circuit breaker can protect lines and power equipment from damage.

## 2. Product Picture of Circuit Breaker (The picture is for reference only; the

## specific kind prevail)




Picture of the Product

# **3. Specification and Model Description of Circuit Breaker**

<u>ND</u> <u>N</u>						
1 2	2 3 4 5	6 7 8 9 10 11 12 13 14 15				
SN	SN name	NDM3				
1	Enterprise code	ND: "Nader" low-voltage apparatus				
2	Product code	M: Molded case circuit breaker (MCCB)				
3	Design SN	3				
4	Shell frame level	800				
5	Breaking capacity	M: Relatively high breaking type				
5	level	H: High breaking type				
		No code: Direct handle-operated mode				
6	Operation mode	P: Motor-operated				
		Z: Rotary operation				
7	Number of poles	3, 4				
		0: Release (none)				
8	Release code	2: Instantaneous tripper only				
		3: Complex tripper				
9	Accessory code	See Table 1				
10	Application code	No code: Power distribution type				
10	Application code	2: Motor protection type				
		A: The N-pole isn't installed with an overcurrent release, but				
	N-pole (neutral	always connected				
11	pole) type of the	B: The N-pole isn't installed with an overcurrent release, but				
11	4P product	on-off with the other three poles				
		C: The N-pole is installed with an overcurrent tripper, and				
		on-off with the other three poles				
12	Special use	Q: Voltage-check self-reset				
13	Rated current	See Table 2				
		No code: Normal product				
		P: Connection busbar				
14	Cabling type	Z1: Rear-plate connection				
17	Cabing type	Z2H: Plug-in rear-plate connection				
		Z3H: Integrated plug-in rear-plate connection				
		Z3Q: Integrated plug-in front-plate connection				
		DL: Dedicated for electric power				
15	Other codes	Codes of internal and external accessories.				
15	Outer codes	Such as manual operation: CS1-A, electric operation: DC1				
		220V, shunt: AC230V, undervoltage: DC220样控制				

#### Table 1: Comparison Table of Accessory Code:

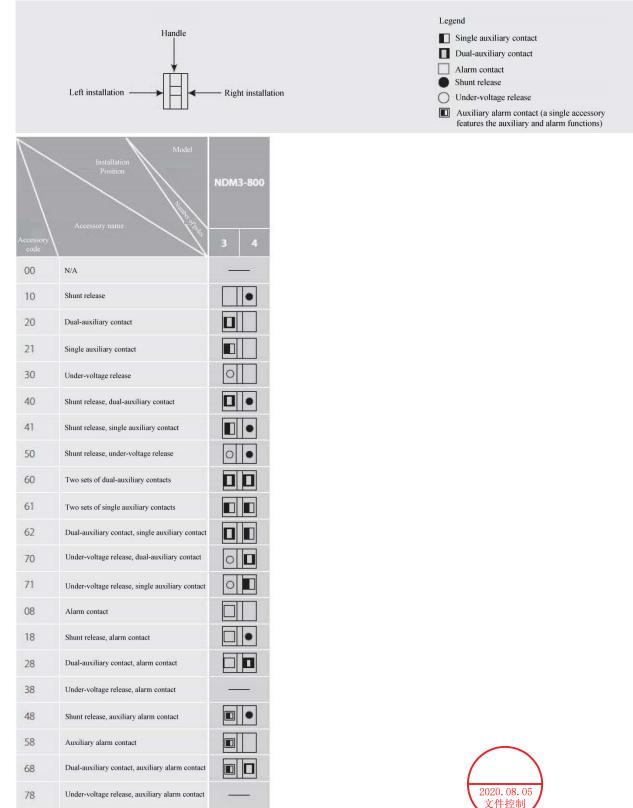

## 4. Main Technical Parameters of Circuit Breaker

Model		NDM3-800			
Rated current of frame Inn	800				
Rated current In (A)			630, 700, 800		
Rated insulation voltage U	i (AC V)		1000		
Rated impulse withstand v	oltage Uimp (V)		8000		
Rated working voltage Ue	(AC V)	380	)/400/415, 500, 660	)/690	
Power frequency withstar	nd voltage U (1min)		3500		
Utilization category		А			
Number of poles	3 4				
Breaking capacity level		М	Н	/	
Rated limit short-circuit	AC380/400/415V	70	100	70	
breaking capacity Icu	AC500V	30	/	30	
(kA)	AC660/690V	20	/	20	
Deted energing	AC380/400/415V	70	75	70	
Rated operating short-circuit breaking	AC500V	30	/	30	
capacity Ics (kA)	AC660/690V	15	/	15	
Operating performance	Electrical life		7500		
(times)	Mechanical life	10000			



4.1 Selection of the circuit breaker connecting bus or cable cross-section area:

	Cable	Cable section		r bar size
Rated current (A)	Quantity	Cross-section area (mm <sup>2</sup> )	Quantity	Cross-section area (mm <sup>2</sup> )
630	2	185	2	40×5
700	2	240	2	50×5
800	2	240	2	50×5

## Table 3 Selection of the NDM3-800 Connecting Bus or Cable Cross-section Area

4.2 Tightening Torque of the Circuit Breaker Terminal and Mounting Screw

Table 4 Tightening Torque of the Circuit Breaker Terminal and Mounting Screw

Model	Thread diameter (mm)	Torque (N m)
NDM3-800	M12	28
1101013-000	M6	6

4.3 Derating factor of temperature change for the circuit breaker

#### Table 5 Derating Factor Table of Temperature Change for the Circuit Breaker

Model		Derating factor of product temperature change						
NDM3-800	Temperat ure (℃)	40	45	50	55	60	65	70
1101015-000	Derating factor	1	0.980	0.960	0.939	0.918	0.897	0.877

Note: 1) When the operating ambient temperature is below  $+40^{\circ}$ C, the product can be used normally without derating capacity.

2) The above derating factors are measured at the frame current.

4.4 High-altitude derating factor of the circuit breaker


## Table 6 High-altitude Derating Factor Table of Circuit Breaker

Altitude (km)	Correction factor of the working current	Correction factor of the working voltage	Correction factor of the power frequency withstand voltage
2	In	Ue	V
2.5	In	Ue	
3	0.980In	0.87Ue	2020.08.05 文件控制999U
3.5	0.972In	0.846Ue	0.858U
4	0.963In	0.813Ue	0.820U
4.5	0.951In	0.781Ue	0.784U
5	0.938In	0.743Ue	0.752U

## 5. Normal Working Environment of Circuit Breaker

- The altitude of the installation site doesn't exceed 2,000m. See the "High-altitude Derating Factor Table of Circuit Breaker" for the derating factor at the altitude;
- 2) The ambient temperature is -35°C ~ + 70°C; the average within 24 h shall not be more than +35°C. If the ambient temperature is higher than +40°C, the user needs to reduce the capacity. See the "Derating Factor Table of Temperature Change for the Circuit Breaker" for the derating factor;
- 3) Its relative humidity at an ambient temperature of +40 °C should not exceed 50%. A higher relative humidity is allowed at a lower temperature. For example, the relative humidity at 20 °C can reach 90%; for frost due to temperature change, the corresponding measures should be taken;
- 4) The product can withstand the effects of wet air, salt mist, oil mist and mould;
- 5) The installation category of the circuit breaker connected to the main loop is: Category III (power distribution and control level), The installation category of the circuit breaker not connected to the main loop is: Category II (load level);
- 6) The pollution level is Level 3;
- 7) The product should be installed in places that are free from explosive media, media corrosive to metal, insulation damaging gas, and conductive dust, which should be also avoided from snow and rain;
- In case of stricter user conditions than the above description, negotiate with the manufacturer.



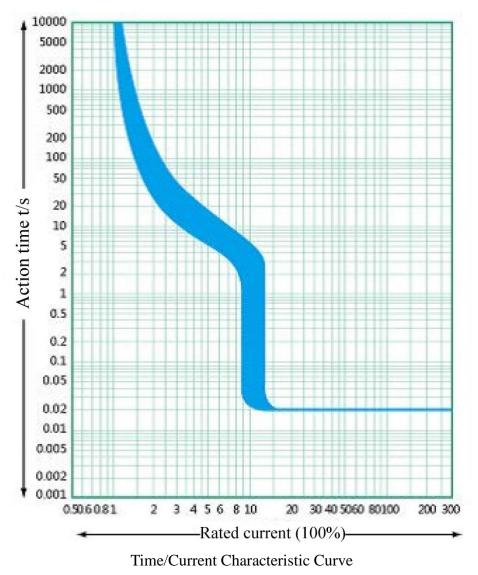


## 6. Short-circuit Overload Protection Characteristic Curve of Circuit Breaker



## 7. Outline and Mounting Hole Dimensions of Circuit Breaker

7.1 Outline and mounting hole dimensions of circuit breaker

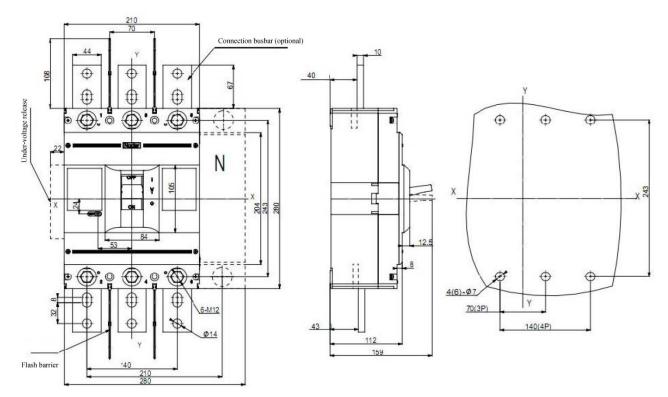


Note: The limit deviation not indicated with the tolerance dimensions is as per GB/T 1804-m.

7.2 Safe mounting distance of circuit breaker

#### Table 7 Insulation Distance Mounted in the Metal Cabinet (Unit: mm)

Mounting distance	A (inlet wire end to the cabinet face)		B (distance from side	C (outlet wire end
Model	With a terminal cover	Without a terminal cover	to the cabinet face)	to the cabinet face)
NDM3-800	25	120	35	35

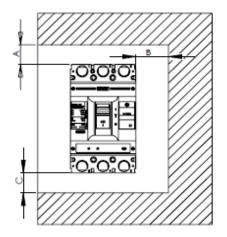




Madal	Width of cir	cuit breaker	I Center distance		
Model	3 poles	4 poles	3 poles	4 poles	
NDM3-800	210	280	250	320	

#### Table 8 Minimum Center Distance between Rowed Circuit Breakers (Unit: mm)

Note: Check the connected busbar or cable during rowing or stacking of the circuit breaker to ensure that the air insulation distance won't be reduced.

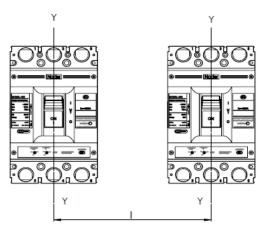


#### Table 9 Minimum Distance between Stacked Circuit Breakers (Unit: mm)

Madal	H (distance of circuit breaker from bottom)		
Model	With a terminal cover	Without a terminal cover	
NDM3-800	155	155	

Note: 1) Bare cable connection

- 2) Cable insulating connection
- 3) Connection without insulation

Requirements: Check whether the terminal cover or phase partition is assembled properly before products are energized.

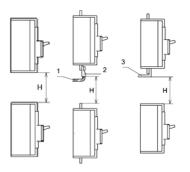





## 8. Installation Direction of Circuit Breaker

For vertical installation of the product, the gradient between the installation surface and the

vertical plane is no more than  $\pm 22.5$  °.

Horizontal installation of the product.

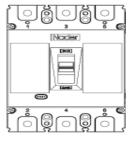

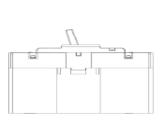

Vertical Installation

Horizontal Installation

## 9. Packaging and Storage of Circuit Breaker

Minimum packaging quantity: 1 piece/box. The packaged products should be stored in a warehouse with the air ventilation and the relative humidity no more than 80% when the ambient temperature is  $-40^{\circ}C \sim +75^{\circ}C$ . No acidic alkaline or other corrosive gas exists in the ambient air in the warehouse. Under the conditions above, the storage period shall be no more than three years since the manufacturing date.

## **10. Installation Direction of Circuit Breaker**

SN	Name	Specification	3P Quantity/Set	4P Quantity/Set
1	Cross small pan-head screw	M6×95	4	6
2	Hexagon nut	M6	4	6
3	Spring washer	6	4	6
4	Plain washer	6	8	12
5	Phase partition		4	6
6	Plug		<b>6</b> <sup>2020.</sup> 文件:	

## **11. Circuit Breaker Notes**

- Various characteristics and accessories of the circuit breaker are set in the factory. The circuit breaker, tripping unit or other accessories can only be adjusted, installed and maintained by the trained or qualified professionals according to the parameter requirements of the line design;
- 2) Ensure that the power supply is off before installing or removing any device;
- 3) The circuit breaker handle can be located in three positions, indicating three states: on, off and free tripping. When the handle is in the free tripping position, pull the handle in the off direction when the circuit breaker is connected and on.



"The storage life is three years"

Record number: LX4.203R-14B